




- 1 FMS-20-LLL-09, FMS-20-LLL-11
- 2 FMS-25-LLL-09, FMS-25-LLL-11

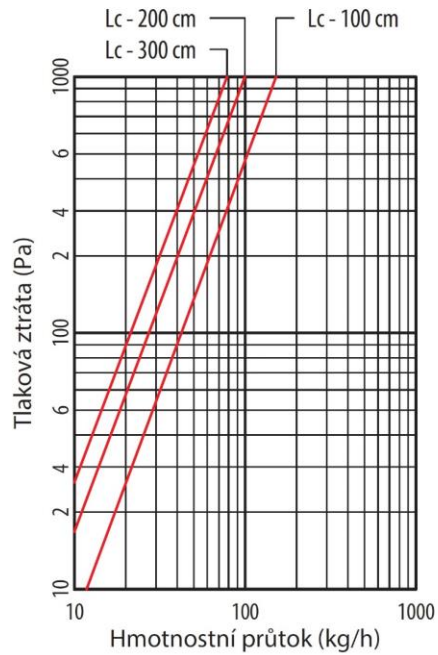


- 1 FMS-30-LLL-09, FMS-30-LLL-11
- 2 FMS-34-LLL-09, FMS-34-LLL-11

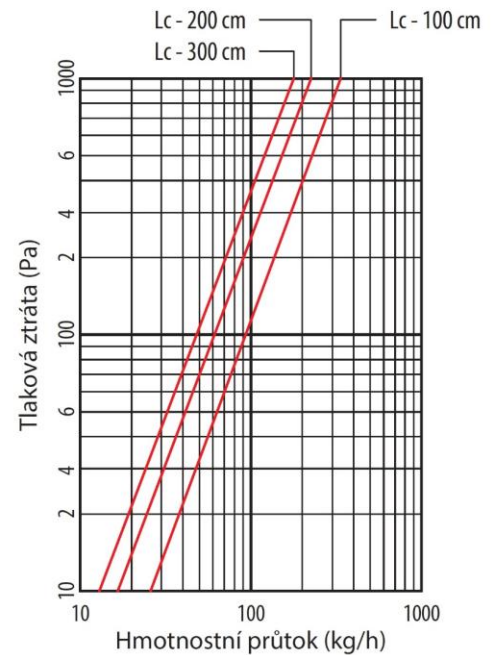

- 1 FMS-42-LLL-09, FMS-42-LLL-11
- 2 FMS-20-LLL-14, FMS-20-LLL-19
- 3 FMS-25-LLL-14, FMS-25-LLL-19

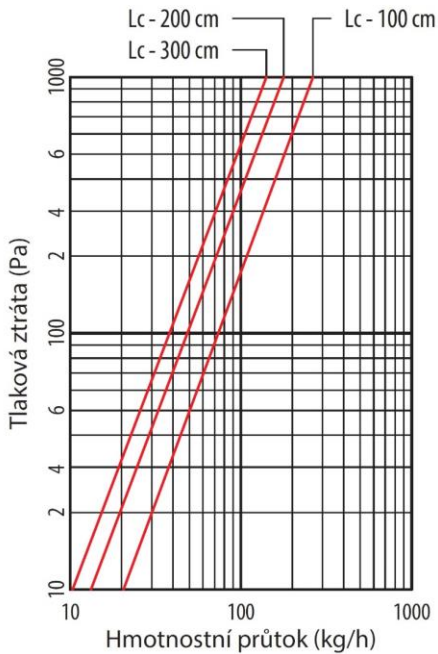

- 1 FMS-34-LLL-14, FMS-34-LLL-19

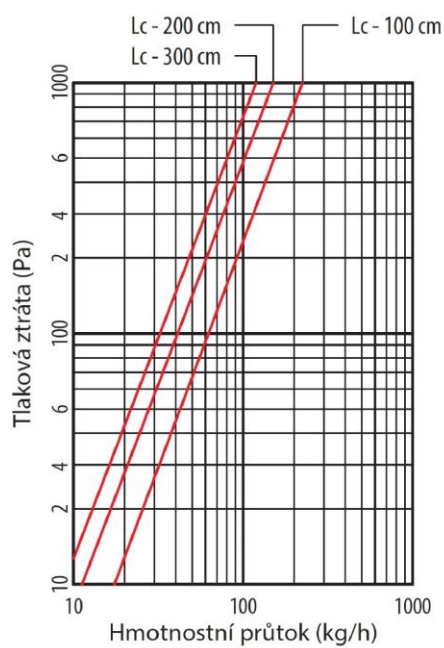

- 1 FMS-42-LLL-14, FMS-42-LLL-19

LLL = celková délka konvektoru (cm)

HH - výška konvektoru (cm)